

48001591

AFN
acessórios 4x4



Checklist / Manual de Montagem - P.Choques
dianteiro P/base guincho AFN VW Amarok



Checklist / Fitting Instructions - Metal
Bumper for VW Amarok with AFN Winch plate
fitted - VW Amarok




Despiezas / Instrucciones de montaje -



2h



1 x1 48002192  ☐	2 x1 48002191  ☐	3 x1 48002121  ☐	4 x1 47001644  ☐
5 x1 47001641  ☐	6 x2 47001152  ☐	7 x1 46005518  ☐	8 x1 46004031  ☐
9 x1 46004030  ☐	10 x1 46004029  ☐	11 x1 46004028  ☐	12 x1 46003575  ☐
13 x1 46003574  ☐	14 x1 46006126  ☐	15 x14 45000775 Prf. Cab. Red. M6x20 ☐	16 x2 45000110  Prf. Cb. Con. M10x25 ☐
17 x14 45000074 Fêmea Freitada M6 ☐	18 x8 45000067 Prf. Cb. Sx. M12X35 ☐	19 x22 45000066 Fêmea Freitada M12 ☐	20 x10 45000050 Anilha M6x15x1,6 ☐
21 x10 45000044 Anilha aba larga M6 ☐	22 x40 45000042 Anilha M12 ☐	23 x14 45000037 Prf. Cb. Sx. M12x30 ☐	24 x4 45000036 Anilha Aba Larga M12 ☐
25 x4 45000011 Anilha aba larga M8 ☐	26 x4 45000008 Prf. Cb. Sx. M8x30 ☐	27 x2 45000502 Borracha vedação ☐	

Volkswagen VW
Amarok (2010-)

Thank you for choosing AFN products, a lot of time in R&D has gone into perfecting our products. However, if you find problems with any AFN products you have purchased, or if you have any information which would help us to improve our products, please let us know.

If you think there may be a problem either before or after fitting the AFN product, it is best to contact your nearest AFN distributor.

WARNING

- This product should be installed as demonstrated in the product fitting instructions.
- If verified that any component is damaged, please contact your nearest AFN distributor.
- The specified parts, will only fit the models specified by AFN.
- Do not modify any component of the product.
- It is recommended that this product is installed by specialised and trained personnel.
- AFN cannot be responsible for any changes made by the vehicle manufacturer.
- Work safely and use specialised tools at all times.
- Always use protective gear.



size	Torque Nm	Torque lbft
M6	9Nm	4 lbft
M8	22Nm	16 lbft
M10	44Nm	32 lbft
M12	77Nm	57 lbft

- Tools set required:



CONTACTS

geral@afn.pt


R. da Madeira, nº 113
Z. Industrial das Travessas
3700-176 S. João da Madeira
Portugal

Tel.: (+351) 256 838 300
Fax: (+351) 256 838 305
www.afn.pt
geral@afn.pt

COORDINATES

DATUM: European 79
UTM 05.44.100
29T 45.28.300
N 40°54' 14.0"
W 08°28' 35.0"

01

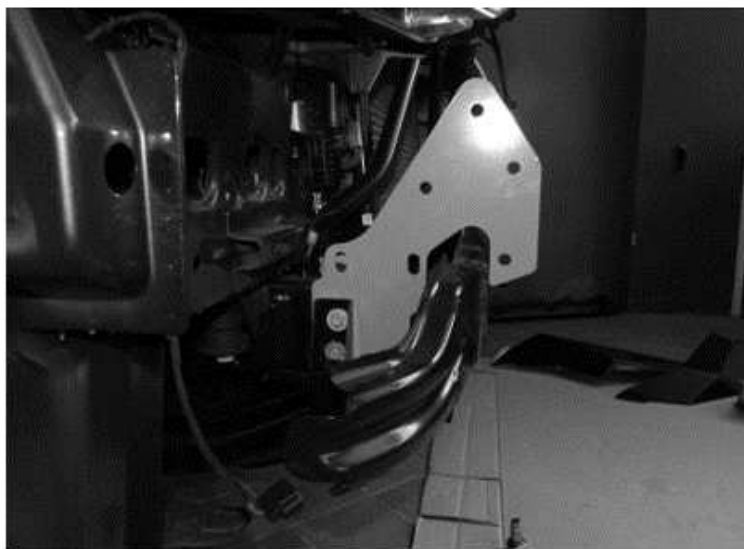


- Please remove the OEM bumper before fitting the AFN bullbar part number 47001641
- Please fit the part number 46004028/46003574
46004029/46003575

02




- In the part number 46004029 use the OEM bolts to hold the OEM skid plate.

03

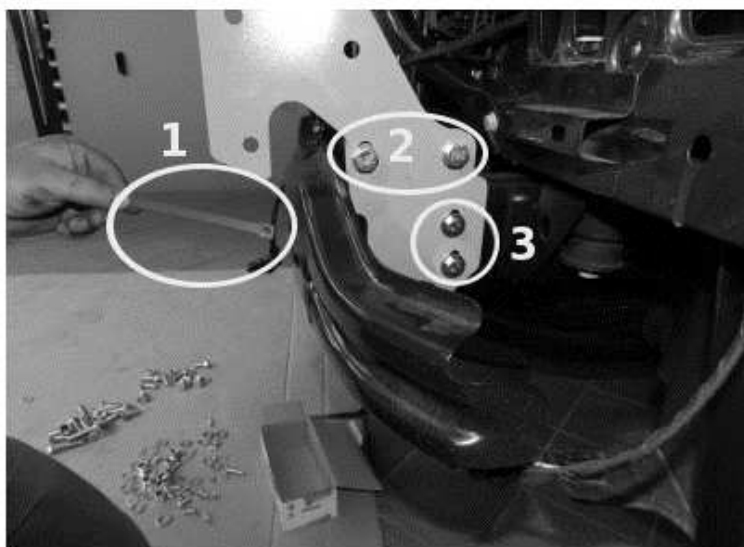

- Insert parts
1 - 47001152
- bolts needed
2 - 45000042
45000066/45000067
- 3 - 45000008/45000011

04

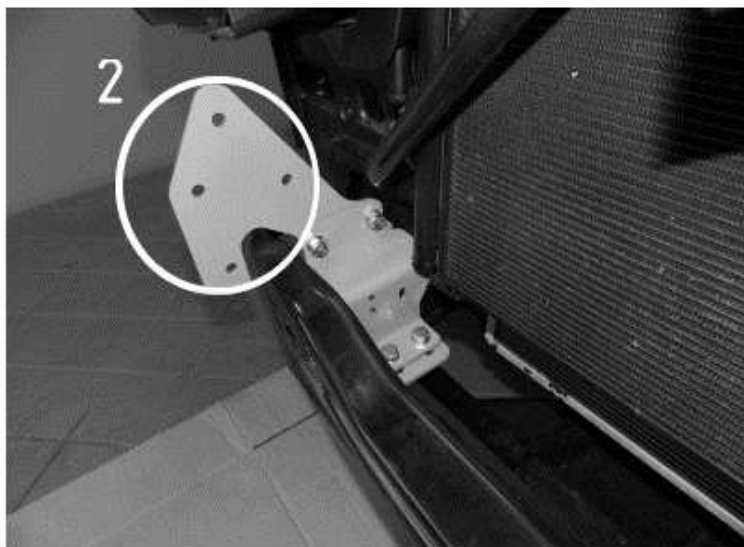

- Please finger tight all the nuts and bolts before do the final tight.
(use the table shown in the first page)

- Use the parts
46004028/46004029
46003575/46003574
- Bolts needed
45000042
45000067/45000066
2 - 45000042
45000037/45000066
(to fit the bumper)

05



- Before fitting the bumper, please place the part number 47001644

-Bolts needed
45000042
45000037/45000066

(use the table shown in the first page)

06



- Fit the part number 47001641


- Bolts needed
45000037/45000036/45000066

- Make sure you have enough gap between the body and the AFNbull bar.

07


- Bolts needed
45000042
45000037/45000066

- Make sure you leave enough gap between the body and the AFN bull bar.

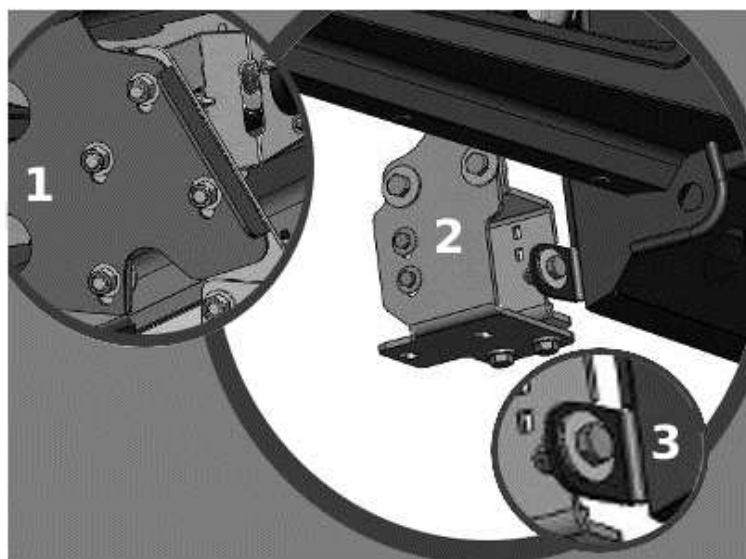08


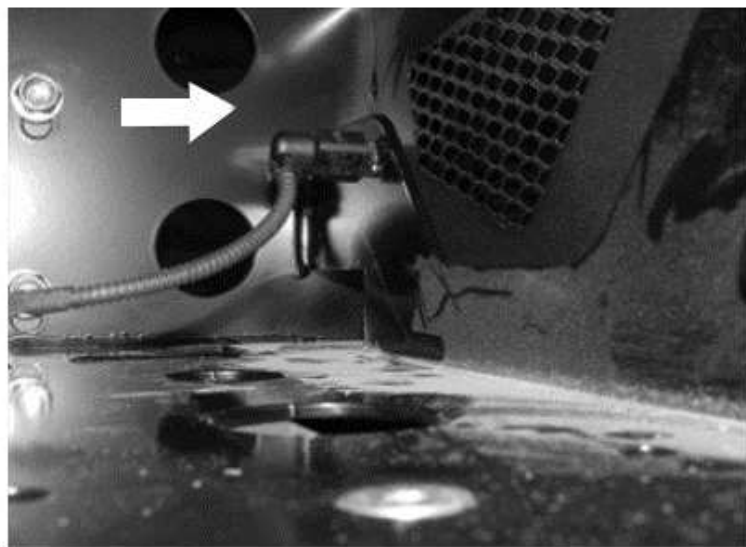
- In this step is possible to see the sequence to use in the final torque of the bolts.

- Please use the right torque settings on all the bull bar bolts, (Use the table shown in the first page).

09


- Fit parts number
46004030/46004031

- Bolts needed
45000775/45000050/45000074

10


- Place the sensor, in the hole of the winch plate.

11


- Fit the part number
46006126

- Bolts needed:
45000775
45000044/45000074

12


- Insert the OEM grille, in the
part number 46006126.

